

**Model 572
Pump Action Rifle
22 Caliber
Owner's Manual**

Remington®

Your Model 572 Fieldmaster comes in two grades — Standard and BDL "Custom Deluxe". Both grades will operate with short, long or long rifle cartridges interchangeably without adjustment. **Note: Clean chamber after shooting 22 short cartridges, to insure proper function of rifle with 22 long and long rifle cartridges. See CLEANING and CARE.** Centerfire sights, front and rear, are featured on both grades. Front and rear sights on both grades are removable for additional scope mounting sighting requirements. The BDL grade American walnut stock includes a comb cut and a more form-fitting pistol grip accented with a black, non-metal cap. Custom checkering is applied to the fore-end and stock on the BDL grade and the tough, long-wearing DuPont RKW wood finish adds a lustrous quality appearance. The Model 572 is shipped fully assembled and should not be disassembled or taken down unless for removal of excess shooting residue or replacement of parts.

SAFETY (Fig. 1) — Cross bolt type at rear of trigger. Red band marking will not show when safety is pushed across to ON SAFE position. Trigger cannot be pulled to fire rifle. **CAUTION:** Before firing make sure barrel bore is clean, free of heavy oil, snow, or any obstruction.

TO FIRE — Push safety across to FIRE position. **RED** band marking on safety will show. Trigger must be pulled each time to fire rifle. Slide fore-end back and forward to eject fired case and reload barrel.

TO SINGLE LOAD BARREL — Push safety ON SAFE. **Unlock action by pressing inward** on action bar lock. Drop a cartridge into ejection port (Fig. 1). Slide fore-end forward to close and lock action against chambered cartridge.

TO MAGAZINE LOAD — Close action and push safety ON SAFE. **Unlock magazine tube** by turning knurled plug at end of tube. Pull inside tube out until loading port in outer tube is open. Load cartridges in open port, bullet end forward towards muzzle. When magazine tube is loaded to capacity, close magazine by sliding inner tube back into magazine. Turn slightly to ease passage over loaded rounds. Turn to lock knurled plug into magazine. **Note:** Knurled magazine plug will not lock properly if too many rounds are loaded into magazine. When loaded to capacity, tubular magazine will hold 20 short 17 long or 15 long rifle cartridges.

TO UNLOAD MAGAZINE — Push safety ON SAFE. **Unlock knurled plug** at end of magazine tube. Pull inner tube completely from magazine. Tilt muzzle slightly downward to allow loaded rounds to slide **slowly** from magazine. Shake rifle slightly to make sure all cartridges slide from magazine. Return inner tube to magazine. **Precaution:** Two rounds may remain in rifle after magazine is unloaded—one in barrel and one in action. See below.

TO UNLOAD CHAMBER AND ACTION — Set safety ON SAFE. Make sure inner tube is replaced and locked by knurled plug to unloaded magazine. Press inward on action bar lock. Open and close action with fore-end repeatedly to eject round from barrel and any rounds remaining in action. End of magazine follower will show from open action as last round is removed from action.

CAUTION: Open action and check **barrel chamber and magazine** to make sure no rounds remain in gun.

BARREL CLEANING — Open action. Wipe barrel bore with soft cloth patches. Pull from breech to muzzle. Scrub bore and cartridge chamber in barrel with wire brush and cleaning solvent if necessary. Follow with patch and re-oil lightly.

ACTION CLEANING — Cock rifle by opening and closing action. Push safety ON SAFE. Tap out trigger plate pins (Fig. 1). Pull out and remove trigger plate assembly from rifle. Clean as a unit. Brush with solvent, dry and re-oil sparingly. Reassemble in reverse order. Make sure hammer remains cocked. Carefully guide projecting carrier and action bar lock into place.

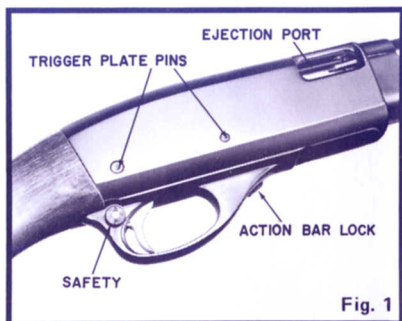


Fig. 1

