
## COMPONENT PARTS OF THE HUNTSMAN PISTOL

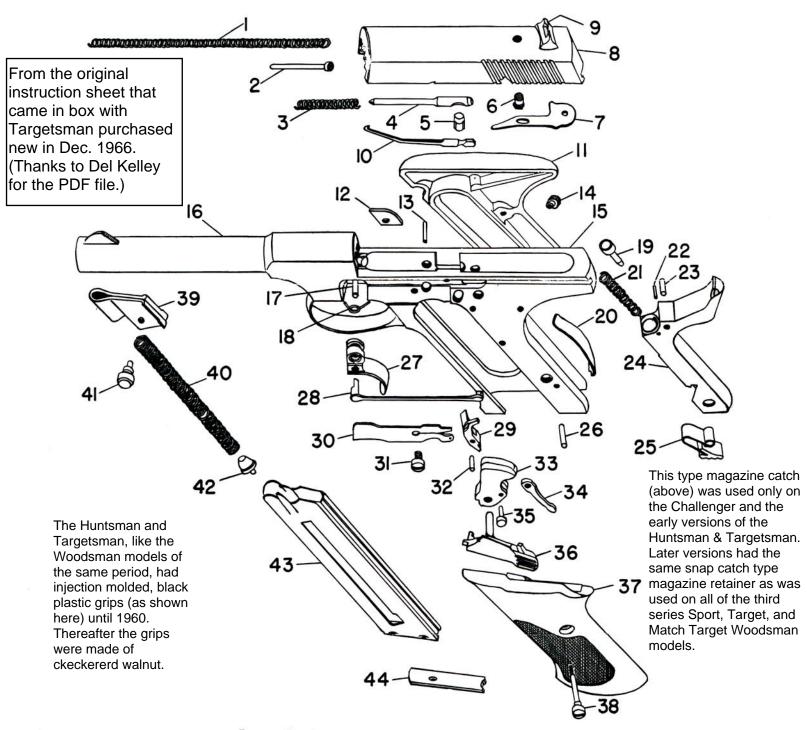

Drawing	D	Part	Drawing	D	Part	Drawing	<b>D</b>	Part
Number	Description	Number	Number	Description	Number	Number	Description	Number
1	Recoil Spring	50025	16	Barrel — 4½-inch	50878	29	Sear	50042
2	Recoil Spring Guide	50026	17	Trigger Pin	50017	30	Side Plate	50689
3	Firing Pin Spring	50023	18	Trigger Spring	50051	31	Side Plate Screw	50684
4	Firing Pin	50022	19	Main Spring Cap	50011	32	Sear Pin	50015
5	Firing Pin Stop	50024	20	Sear Spring	50044	33	Hammer	50035
6	Assembly Lock Plunger		21	Main Spring	50010	34	Hammer Strut	50036
7	Assembly Lock	50019	22	Main Spring Cap Pin	50010	35	Hammer Strut Pin	50729
8	Slide	50692	23	Main Spring Cap Fin	30012	36	Safety Lock	50038
9	Rear Sight	50190	23	Lock Pin	50015	37	Stock, Left-hand	51557
10	Extractor	50021	24			38	Stock Screw	50088
11	Stock, Right-hand	51559	24	Main Spring Housing	50688	39	Magazine Follower	51467
12	Ejector	51549	25	Magazine Catch Assembly	50881	40	Magazine Spring	50064
13	Ejector Pin	50032	26	Main Spring Housing	100000	41	Magazine Follower Stud	51468
14	Stock Screw Nut	50089	0	Retainer Pin	50015	42	Magazine Spring Guide	50115
15	Receiver	Not For Sale	27	Trigger	51577	43	Magazine Tube	51464
16	Barrel — 6-inch	50885	28	Trigger Bar	50050	44	Magazine Base	51471